


INSTRUCTION BOOKLET
NOTICE D'UTILISATION
GEBRAUCHSANWEISUNG
ISTRUZIONI D'USO
GEBRUIKSAANWIJZING
BRUGSANVISNING
INSTRUCCIONES DE USO
ISTRUÇÕES DE USO

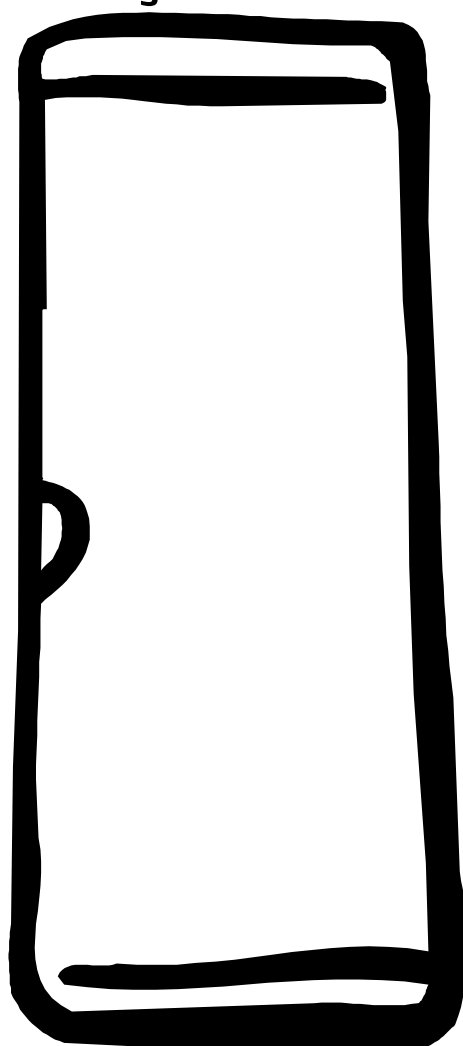

ERE3000, ERE3500, ERE3500X

GB

FR

DE

IT

NL

DK

ES

PO

Safety instructions



Your new fridge may have other functions compared to your previous one.

Carefully read these instructions to learn how the appliance works and how to care for it. Keep the instruction booklet. It will come in handy if you later sell the cabinet or give it to somebody else.

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or warnings contact the Customer Care Department.

For the User

- The cabinet is intended for keeping foodstuff in a normal household as explained in this instruction booklet.
- Do not keep explosive gases or liquids in the refrigerator or freezer compartment. They may explode and cause injury and material damage.
- Do not let sharp objects come into contact with the refrigerating system on the back of and inside the cabinet. If the refrigerating system is punctured, the cabinet will be damaged and foodstuff inside may spoil.
- Do not keep carbonised drinks or bottles in the freezer compartment. The glass bottles may break.

- The cabinet is heavy. The edges and projecting parts of the cabinet may be sharp. Be careful when moving the cabinet and always use gloves.

Child Safety

- Pay attention so that small children do not gain access to the operating controls or the inside of the cabinet.

Scrapping old cabinets

When discarding the cabinet, hand it over to a recycling station. For more information, call your local city office or your dealer.

Contents




Safety instructions	2
Scrapping old cabinets	2
Contents	2
Description of the Appliance	3
Control Panel	3
Before use	4
Using the fridge	4
To start the fridge and set the correct temperature	4
Temperature inside the fridge	4
Measuring the temperature	4
Switching off	5
Alarms and other features	5
Cabinet interior	6
Hints and Tips	7
Saving energy	7
Food Storage	7
Protect the environment	7

Maintenance and Cleaning	7
Removing the ventilation grille	7
Cleaning	8
Defrosting the fridge	8
To Change the Light Bulb	8
Change of carbon filter	9
When the appliance is not in use	9
Something Not Working	9
Guarantee Conditions	10
Service and Spare Parts	10
Technical specification	11
Installation	11
Unpacking	11
Remove the transport supports	11
Cleaning	11
Electrical connection	11
Installation of carbon filter	12
Installing the cabinet	12
Door Reversal	13


Description of the Appliance

GB

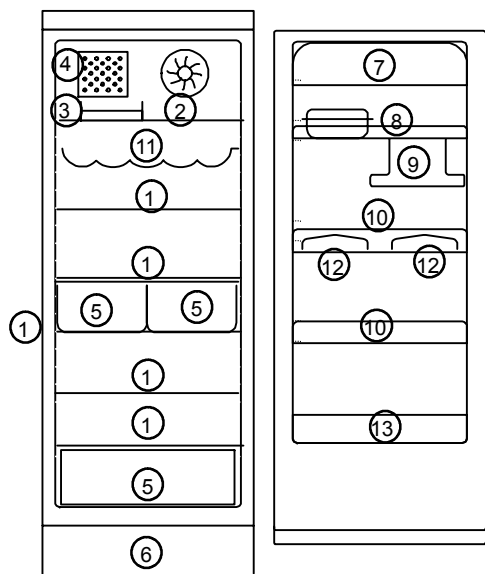

Model ERE3000


1. glass shelf
2. quick chill shelf
3. bottle- and can holder
4. grid
5. vegetable drawer
6. ventilation grille
7. butter compartment
8. door shelf +box
9. sliding shelf
10. door shelf
11. bottle shelf
12. egg holder
13. bottle shelf

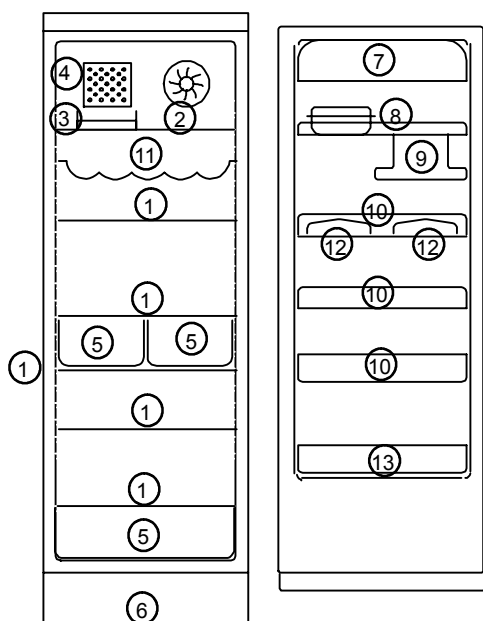

Model
ERE3500/ERE3500X

1. glass shelf
2. quick chill shelf
3. bottle- and can holder
4. grid
5. vegetable drawer
6. ventilation grille
7. butter compartment
8. door shelf +box
9. sliding shelf
10. door shelf
11. bottle shelf
12. egg holder
13. bottle shelf

Control Panel

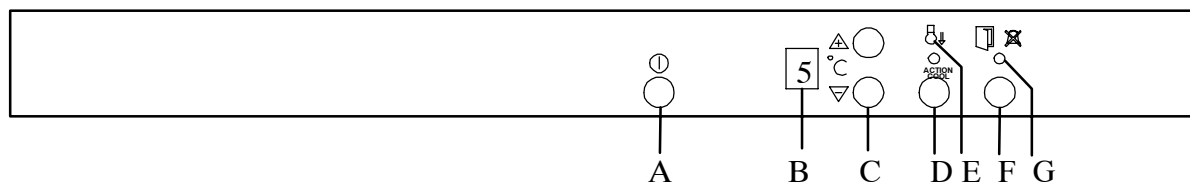

A. Refrigerator power switch

Switches the refrigerator on and off.

B. Temperature display

Shows the average temperature inside the refrigerator.

C. Temperature adjustment button/thermostat

Used to set the temperature in the refrigerator.

D. ACTION COOL button

Used to switch the Action Cool feature on and off.

E. Yellow indicator lamp

Lights when Action Cool is operating.

F. Alarm shut-off button

Used to turn the audible alarm off.

G. Red warning lamp

Flashes when one of the alarms in the cabinet has been triggered.

Before use


GB

Position and clean the cabinet as explained in the section "Installation".

Check that the drain hose at the rear of the cabinet discharges into the drip tray.



Before inserting the power plug into the outlet and switching on the cabinet for the first time, leave it standing upright for about 4 hours. Otherwise the compressor may sustain damage. This time will allow the oil sufficient time to return to the compressor.

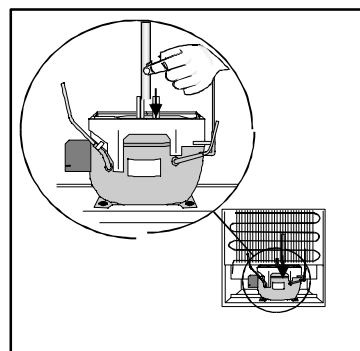

Using the fridge

GB

To start the fridge and set the correct temperature

Switching on:

Switch on the fridge by pressing the power switch.

Setting the temperature

Press the buttons until the desired temperature flashes in the temperature display (The temperature can be set between +2°C and +8°C.)



"+" raises the temperature.

"-" lowers the temperature.

Once set, the temperature display shows "-" until the temperature inside the fridge reaches +9°C or below. Allow the cabinet to run for a period of 24 hours whenever the temperature setting is changed. This will allow the temperature to stabilise inside the cabinet.

It is not necessary to reset the temperature when the cabinet is switched on after it has been out of use.

The thermostat recalls the previously set temperature.




Temperature inside the fridge

A suitable temperature inside the fridge is approx. +5°C. Storage temperature in the cabinet is even on all of the shelf levels. The vegetable box which is placed in the bottom has a temperature of 3-4°C warmer than the intended temperature setting.

Measuring the temperature

If the temperature is measured using a standard, single thermometer, this should be put in a glass of water centrally placed inside the cabinet. This will reflect the temperature inside the food products. Do not place the thermometer hanging or lying directly on the shelf.

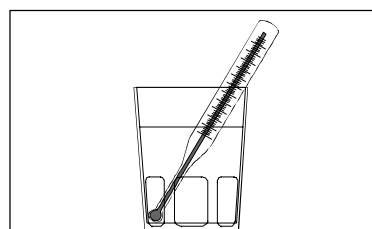

Hints:



- Distribute foodstuffs to allow cold air to circulate freely between the products.
- Also never put warm products into the cabinet. Wait until they have cooled down.
- Cover all foods properly.

Switching off

Switch off the cabinet by pressing the power switch. Keep the button pressed for approx. 1 second.



Power to the cabinet is completely interrupted only when the power plug is disconnected.

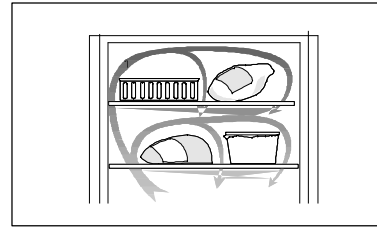

Alarms and other features

Door open alarm

If the fridgedoor remains open for more than 5 minutes, the red warning lamp starts flashing and an audible alarm sounds.

To switch off the alarm:

Press the "alarm shut-off button". The red warning lamp goes out when the door is closed.

Quick chill (Action cool / quick chill)

This function has two usage areas. One area in connection with cans / bottles being quickly chilled on the quick chill shelf, and the other in connection with large amounts of food at room temperature being placed on the shelf.

Chilling of cans/bottles:

When groceries are placed on the shelf (see under section; Action cool / Quick chill shelf) the air regulator should be turned to it's maximum position, then press the Quick chill button.

This will be indicated in the symbol window with a "C" and by the yellow lamp being lit.

Chilling of warm groceries:



This function is used in connection with large amounts of groceries at room temperature being placed in the fridge. Pressing the Quick chill button starts this function.

This will be indicated in the symbol window with a "C" and by the yellow lamp being lit.

When this function has been activated forced air will chill the groceries, and the temperature in the cabinet reset to +2°C. After 6 hours the Quick chill automatically shuts off and the temperature gradually goes back to its normal setting.

Carbon filter's function:

The built-in carbon filter means that strong smelling groceries can be placed near other groceries without affecting their taste or aroma.

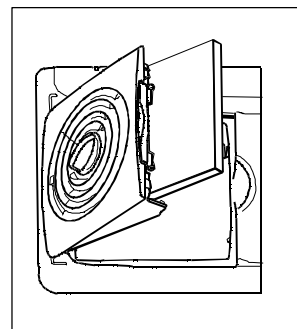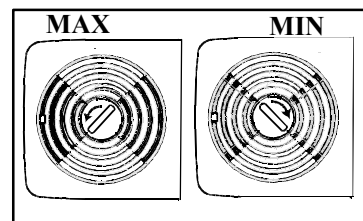

Cabinet interior





The shelves and door compartments are removable and can easily be re-arranged.

Certain shelves must be lifted up by the rear edge to enable them to be removed.

The lower door compartment and the glass shelf above the vegetable drawer must not be moved.


They are required for proper air circulation inside the cabinet.

Shelves with a raised edge should be placed with the raised edge facing the rear wall of the cabinet.

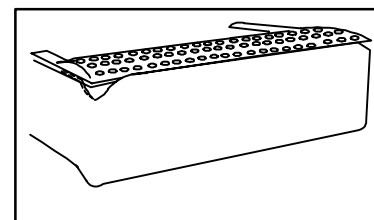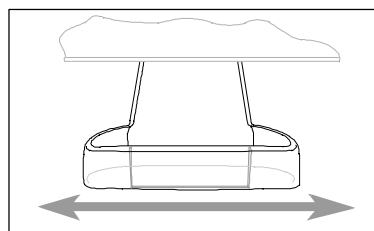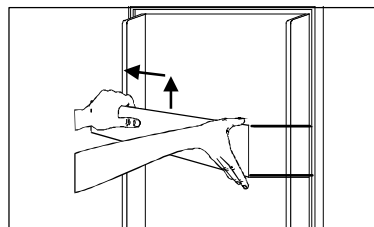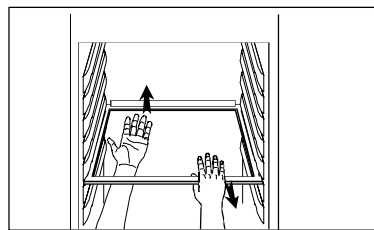

The vegetable box has a ventilation edging to increase the circulation of air and reduce the risk of condensation.

The vegetable box has two moveable partitions with five different choices in order to separate different vegetables.

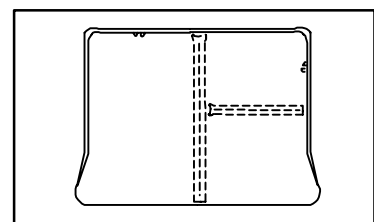



Bottle- and can holder

The side of the bottle and can holder is moveable to enable a more flexible placement of cans and bottles in front of the grid. To allow the holder to be moved easier, when moving sideways, press the shelf backwards.

During chilling of cans or bottles the article should be centrally placed in front of the grid to obtain the best chilling effect.

The bottle support can be pulled out when chilling larger bottles.

For a description of this functions start and stop, see under heading Action Cool/Quick Chill.

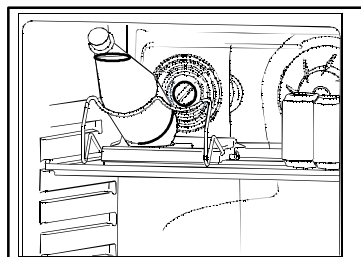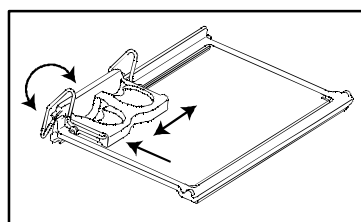



Quick chill shelf:

The lower Quick chill shelf can be placed in one of the upper grooves. To maintain the best performance the shelf should be placed in the second groove from the top.

Dismantling of the bottle- and can holder.

Take out the Quick Chill shelf with holder from the cabinet.

To loosen the holder from the shelf, bend the hooks/brackets that surround the backside of the shelf.

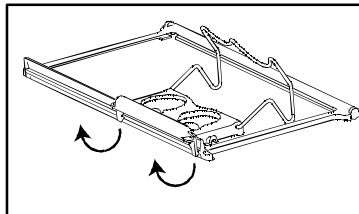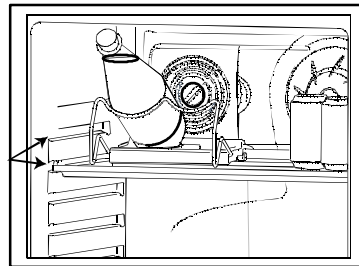

Hints and Tips



Saving energy

- Pay careful attention to where the cabinet is placed. See the section "Installation". When installed correctly, the cabinet will consume less energy.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.
- Thaw frozen food in the fridge. This will ensure safer defrosting of foods and reduce the work of the refrigeration unit
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.
- Always leave warm food to cool down to room temperature before placing in the fridge.
- Make sure the door gasket is complete and always clean.

Food Storage

- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larder

compartment.

- Avoid buying frozen food if you can not store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best.
Remove suspect food from you refrigerator and clean, refer to cleaning and maintenance.

Protect the environment

- Hand over the cabinet packaging and discarded fridges and freezers to a recycling station. Contact your local council or Environmental Health office for more information.
- Keep foodstuff in re-usable containers. Cut down on disposable material as much as possible.
- When cleaning the cabinet, use a mild washing-up detergent.
- Follow the advice in the section "Saving energy"
- The door gasket and coolant used in this cabinet will not harm the ozone layer.
- All parts in the packaging can be recycled.
- The cabinet has been designed for easy dismantling and subsequent recycling.


Maintenance and Cleaning



Removing the ventilation grille

The ventilation grille can be removed, e.g. to wash the grille.

Make sure the door is open when removing the ventilation grille. Unsnap the upper edge of the grille by pulling outward/downward. Then pull the grille straight out to completely remove it.

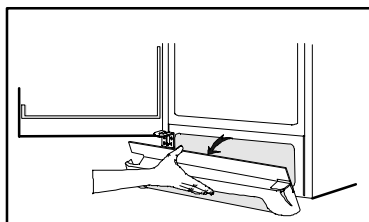

Cleaning

Clean the cabinet at regular intervals.



Don't use detergents, abrasive powders, high perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol when cleaning the product

Clean out the drip channel inside the fridge at regular intervals and ensure that the drip channel is clear at all times. If blocked carefully clear using a piece of flexible curtain wire inserted into the drain outlet to remove the blockage.

Disconnect the appliance from electricity supply.

Internal Cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0,5 litre water). Be careful when cleaning the inside of the cabinet, due to fragile edges.

Rinse and dry thoroughly.

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.




External Cleaning

Wash the outer cabinet with warm soapy water.

Remove the ventilation grille (see the section "Removing the ventilation grille") and vacuum-clean under the cabinet. Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.



When moving the cabinet, lift it by the front edge to avoid scratching the floor.

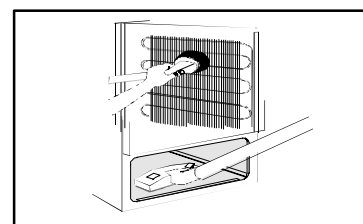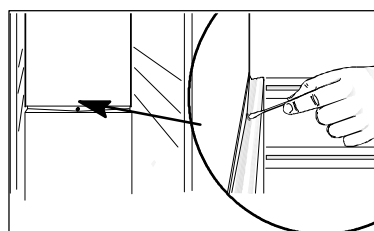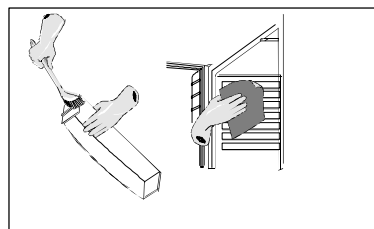

Defrosting the fridge

The fridge is defrosted automatically every time the compressor stops. Frost formation can be prevented by:

- not putting warm foodstuff inside the cabinet.
- avoiding frequently opening the door or keeping it open too long.


To Change the Light Bulb

The light is switched on automatically when the door is opened. Before replacing the light bulb, disconnect the power plug from the outlet.

Cut the packaging around the bulb socket.




Keep the packaging on to hold the bulb when setting it into the socket. Do not touch the bulb with your bare fingers. Halogen light bulbs are sensitive to grease from the skin.

Use a clear halogen light bulb.

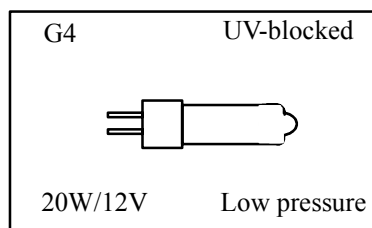

Change of carbon filter

To maintain the best performance the carbon filter should be changed once a year with normal usage. New carbon filters can be purchased from your local dealer. The filter is placed behind the grill and can be reached by opening the cover. The cover can be opened by simultaneously pressing the lever on the right of grill (1) and turning the cover outward (2). The carbon filter is then pulled out of its slot (3). The new carbon filter is placed in the existing slot - The filter should be handled carefully so fragments don't loosen from the surface.

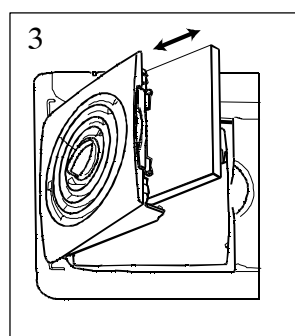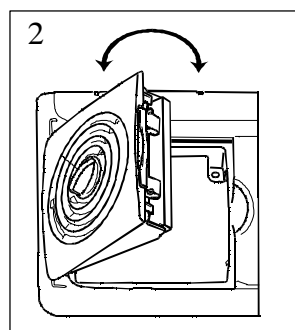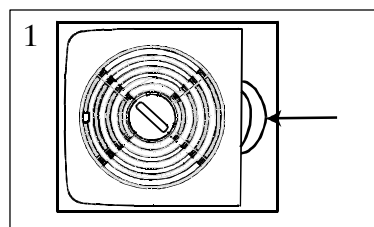

When the appliance is not in use

Disconnect the appliance from electricity supply.

Empty all foods and clean the appliance, leaving the doors ajar to prevent unpleasant smells.

If the cabinet will be kept on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure.

Something Not Working



Before contacting your local Service Force Centre check the following point:

Problem	Possible cause / Remedy
"□" is displayed in the temperature display.	An error has occurred in measuring the temperature. Call your service representative. (The cooling system will continue to keep food products cold, but temperature adjustment will not be possible.)
It is too warm inside the refrigerator.	Set a lower temperature. Put food products in the right place inside the refrigerator. See the chapter "Temperature inside the refrigerator". Distribute the food products to allow cold air to circulate around them. Make sure that the door is completely closed and that the insulating strip is complete and clean.
It is too cold inside the refrigerator.	Set a warmer temperature. Vegetables and other products that are easily frozen have been placed on a "too cold" shelf. See the chapter "Temperature inside the refrigerator".
There is water on the cooling plate inside the refrigerator.	This is normal. During automatic defrosting, frost thaws on the cooling plate.
Water is running inside the refrigerator.	Clean the water drain and drain hole inside the refrigerator using e.g. cotton swabs or a bottle cleaner brush. Some food products could have been placed near the rear of the appliance preventing the water from running into the drain.

Water comes out on the floor.	Place the drain hose at the back of the cabinet above the drain bowl. See the chapter "Before using the cabinet the first time".
The compressor operates continuously.	Set a warmer temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean.
The cabinet does not operate at all. Cooling or interior light does not operate. No indicator lamps light.	Power does not reach the cabinet. (Try connecting another electrical device to the power outlet.) The cabinet is not switched on. The fuse has blown. The power plug is not properly connected.
Sound level in cabinet is too high.	The refrigerating system will always produce some sounds. A pulsing sound is heard when coolant is pumped inside the cooling pipes. A ticking sound from the thermostat can be heard when the compressor switches on and off. The sound level varies depending on the operation of the cabinet. If you feel the sound level is incorrect: Make sure the pipes at the back of the cabinet not touch each other. Carefully bend them if they do. If the cushion spacers (between the cabinet wall and pipes) come loose, put them back in place again. Carefully follow the instructions in the chapter "Installing the cabinet".

If after above checks there is still a fault call your local Service Force Centre. In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.

Guarantee Conditions

See Guarantee Conditions on the Registration Card.

Service and Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Electrolux Service Force Centre by telephoning:

XXXXXXXXXXXX

Your call will be routed to the Service Force Centre covering your post code area. The address of your local Service Force Centre is detailed in the accompanying Customer Care Book.

Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working"

When you contact the Service Centre you will need to give the following details. They will be found inside your appliance.

MOD (modell):.....

PROD.NO (model number):.....

SER:NO (serial number):.....

Purchase date:.....

Technical specification

GB

Model	ERE3000	ERE3500/ERE3500X
Volume	305 l	354 l
Width	595 mm	595 mm
Height	1600 mm	1800 mm
Depth	600 mm	600 mm
Energy consumption	168 kWh/y	175 kWh/y
Energy class	A	A
Rated power	85 W	85 W

Installation

GB

Unpacking

Unpack the cabinet and check that it is in good condition and free of any transport damage. Notify the dealer immediately of any damage. Hand the packaging over for recycling. For more information, contact your local city office or the dealer.



Do not allow children to play with the packaging. The plastic film can cause suffocation.

Remove the transport supports

Remove the tape and the transport supports from

- the door sides
- inside the door hinges
- the shelves

Remove the transport support on the glass shelf by pushing the support forward along the edge of the shelf until it stops. Take hold of the rear edge of the glass shelf and pull the shelf and transport support forward until the shelf tilts and the transport support can be removed. Some models are fitted with a silencing pad under the cabinet. Do not remove this pad.

Cleaning

Wash the inside of the cabinet using lukewarm water, a mild washing-up detergent and a soft cloth.



Electrical connection

Connect the cabinet to a grounded electrical outlet.

Voltage: 230 V.

Fuse: 10 A.

Refer to the rating plate on the left inside the cabinet.


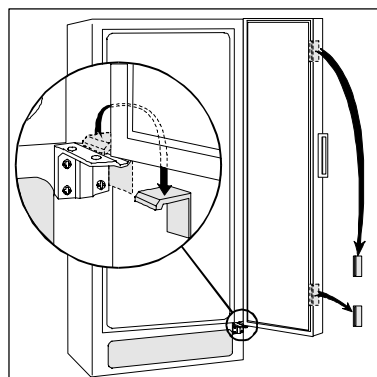
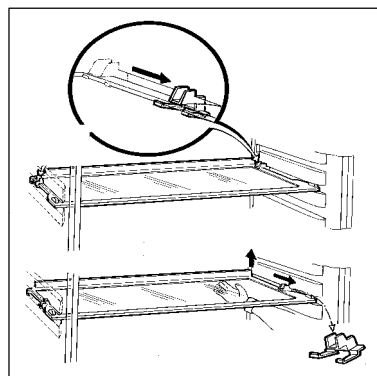


Installation of carbon filter

On delivery the carbon filter is placed in a plastic bag to secure the length of life of the carbon filter. The filter should be placed behind the grill before the cabinet is turned on.

The cover can be opened by simultaneously pressing the lever on the right of grill (1) and turning the cover outward (2). The carbon filter is then mounted in the slot found in the back of the cover.

The filter should be handled carefully so fragments don't loosen from the surface.

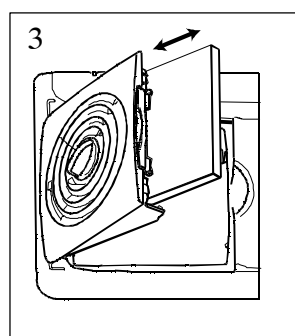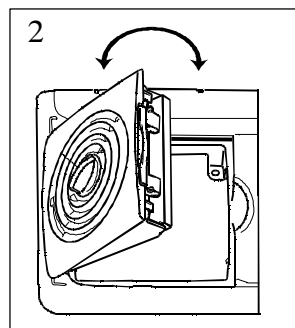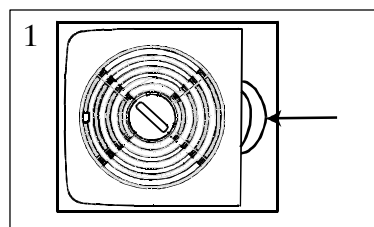

Installing the cabinet

When two appliances are placed beside each other, the distances enclosed in the plastic wrapping should be glued between the appliances. As shown in the illustration.



To obtain the best performance from the cabinet, ensure :

- the cabinet is placed in a dry, cool place and is not exposed to direct sunlight.
- the cabinet is not placed close to a source of heat, e.g. a cooker or dishwasher.
- the cabinet is level. The cabinet should not lean against any wall. If necessary adjust the feet using the adjustment spanner supplied.
- there is good air circulation around the cabinet and that the air channels below and behind the cabinet are not blocked. The ventilation space above the cabinet must be at least 4 cm. The ventilation space can either be
 - a) directly above the cabinet, or
 - b) behind and above the top cupboard. In this case, the space behind the cupboard must be at least 50 mm deep.

Cabinet is placed at a location whose ambient temperature corresponds to the climate classification*, for which the appliance is designed.

* See on the rating plate on the inside of the appliance.

The following table shows which ambient temperature is correct for each climate classification.

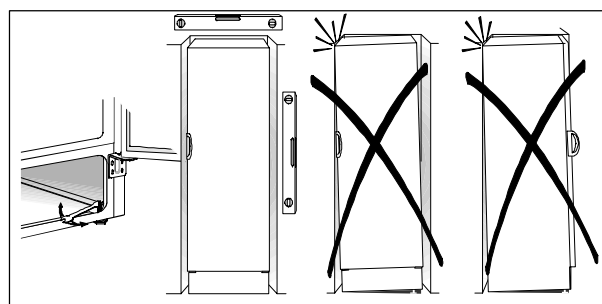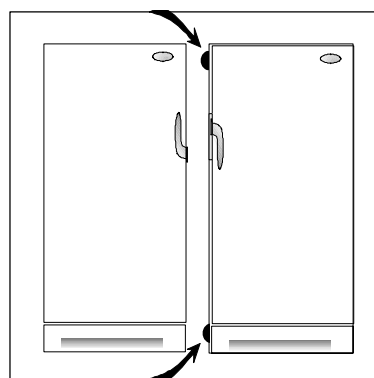

Climate classification	for an ambient temperature of
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+18°C to +38°C
T	+18°C to +43°C

If the cabinet is placed in a corner and the side with the hinges facing the wall, the distance between the wall and the cabinet must be at least 240 mm to allow the door to open enough so that the shelves can be removed.

Check that the drain hose at the rear of the cabinet discharges into the drip tray.






The power plug must be accessible after installation of the cabinet.

Door Reversal

1. Close the cabinet and remove the plug from the electrical socket.
2. Remove the ventilation grille. There is a part on the grille that can be removed. Reposition it and put it on the other side.
3. Put the cabinet on a wooden board when it is laid down. Later, when raising the cabinet, it will be easier to grip under the cabinet thanks to the board.
4. On the upper part of the cabinet. Put the hinge pin on the other side.
5. On the lower part of the cabinet.
 - a Unscrew the hinge.
 - b Remove the door-closing fittings from the hinge and put the hinge pin on the other side. Then attach the supplied door-closing fitting.
6.
 - a. Remove the door-closing fitting from the bottom of the door.
 - b. Remove the plastic plug from the corresponding hole on the other side. Use a screwdriver to rock the plug loose. Then secure the supplied door-closing fitting.
 - c. Secure the lower hinge.

Remove any play in the door by adjusting the height of the lower hinge with the supplied spanner. Secure with the lock-nut.
7. Raise the cabinet and replace the ventilation grille.
8. To transfer the handle.

Unscrew the screws. Fit the handle onto the opposite side by turning it one half circle. Press the supplied plastic plugs into the holes to which the handle was previously fitted.
9. Put the cabinet in position. Check that it stands straight. See the section "Positioning the cabinet".

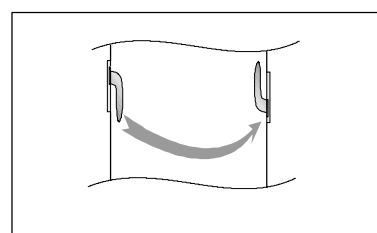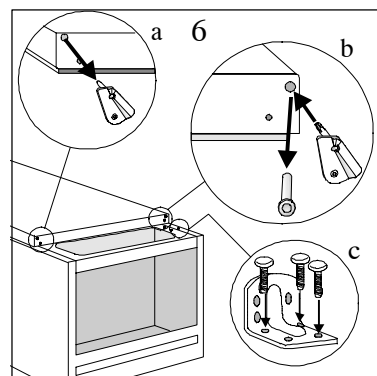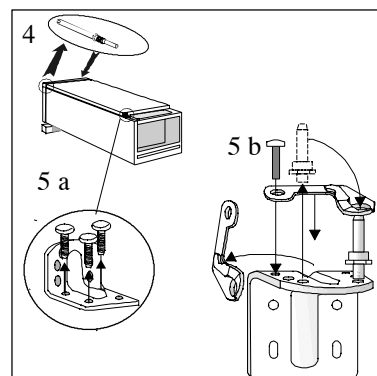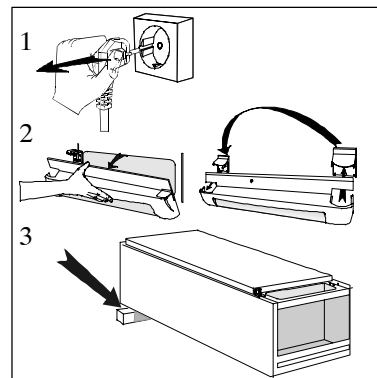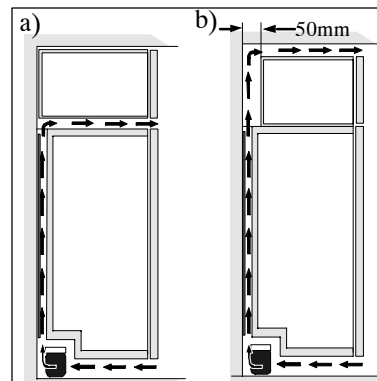

The Electrolux Group. The world's No.1 choice.

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

Le Groupe Electrolux est le premier fabricant mondial d'appareils domestiques, d'entretien et pour l'extérieur. Plus de 55 millions de produits du Groupe Electrolux (tels que réfrigérateurs, cuisinières, lave-linge, aspirateurs, tronçonneuses, tondeuses à gazon) sont vendus chaque année pour un montant d'environ 14 milliards d'Euros dans plus de 150 pays à travers le monde.

Die Electrolux-Gruppe ist der weltweit größte Hersteller von gas- und strombetriebenen Geräten für die Küche, zum Reinigen und für Forst und Garten. Jedes Jahr verkauft die Electrolux-Gruppe in über 150 Ländern der Erde über 55 Millionen Produkte (Kühlschränke, Herde, Waschmaschinen, Staubsauger, Motorsägen und Rasenmäher) mit einem Wert von rund 14 Mrd. USD.

Il Gruppo Electrolux è il più grande produttore mondiale di apparecchiature per la cucina, per la pulizia e di attrezzature per il giardinaggio e per uso forestale. Oltre 55 milioni di prodotti del Gruppo Electrolux (quali frigoriferi, cucine, lavabiancheria, lavastoviglie, aspirapolvere, motoseghe e rasaerba) vengono vendute ogni anno in più di 150 Paesi del mondo per un valore di circa 14 miliardi di dollari.

De Electrolux Groep is de grootste producent ter wereld van aangedreven apparaten voor gebruik in de keuken, reinigingswerkzaamheden en voor gebruik buitenshuis. In meer dan 150 landen over de hele wereld worden ieder jaar meer dan 55 miljoen Electrolux producten (zoals koelkasten, fornuizen, wasautomaten, stofzuigers, kettingzagen en grasmaaiers) verkocht ter waarde van circa USD 14 miljard.

Electrolux Gruppen er verdens største producent af energidrevne produkter til køkken- rengørings- og udendørs brug. Der sælges årligt over 55 millioner produkter fra Electrolux Gruppen (blandt andet køleskabe, komfurer, vaskemaskiner, støvsugere, motorsave og plæneklippere) til en værdi af ca. kr. 100 milliarder. Produkterne sælges i mere end 150 lande verden over.

El Grupo Electrolux es el mayor fabricante del mundo de aparatos para la cocina, limpieza y uso exterior. Más de 55 millones de productos del Grupo Electrolux (frigoríficos, congeladores, cocinas, lavadoras, aspiradores, motosierras y cortacéspedes) se venden cada año por un valor aproximado de 14 billones de US\$ en más de 150 países del mundo.

